


Glass Gobo Installation Tips

Please read before installing your gobo.

1. Prior to installing the gobo, make sure the lamp is adjusted to provide an even beam of light (bench focus).

Dark and Aluminum Coating: If the gobo has a dark side and an aluminum side, always load the dark side away from the light source.

Aluminum Coating: If both sides of the gobo appear aluminum, load with coated (gray) surface toward the light source.

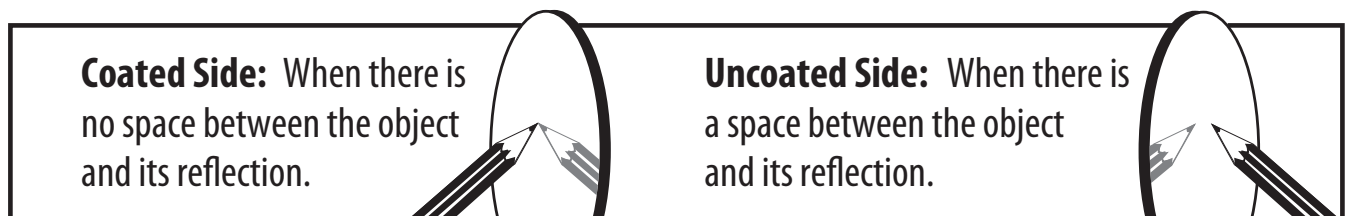

2. Apollo gobos will arrive clean and ready for installation. If it becomes necessary to clean your gobo please follow these instructions: Dampen a soft cloth with isopropyl alcohol. Gently wipe the surface of the glass. Be careful not to get any liquid along the edges of a multicolored gobo as it may leak between the glass layers.

3. Warning and Recommendations

- Glass gobos are not recommended for use in the Altman 360Q or 3.5Q fixtures or in any fixture using more than a 750W lamp, unless the fixture is equipped with appropriate heat protection equipment.
- **DO NOT** touch the surface of the gobo as the oils from your hand may cause damage to the coating.
- While loading, do not use any methods that will restrict the glass from expanding.